

## WX 6200 ES [CONN]



### FEATURES

- OHV engine provides consistent power for multiple applications
- Fuel: Petrol
- Starting Systems: Electric (with battery)
- Low-oil level shutdown automatically safeguards engine from damage
- Engine oil for the first startup supplied in a bottle
- Digital multi meter tracks engine runtime for maintenance intervals
- Fuel gauge allows user to track gasoline levels
- Practical quick user's Starting Instruction (decal)
- AVR Automatic Voltage Regulator
- Kit wheels integrated for easy transportation
- CONNector for AMF
- Optional: Automatic Main Failure (AMF)



### Osiągi

Częstotliwość	Hz	50
Napięcie	V	230
Liczba faz		1
Moc maksymalna	watt	5800
Moc ciągła	watt	5300



## Silnika

Marka	Pramac	
Typ	OHV	
Zoptymalizowana emisja spalin	Stage V	
Obroty znamionowe	obr/min	3000
Paliwo	Benzyna	
System rozruchu	Elektryczny (+Ręczny)	
Pojemność układu smarowania	l	1.1
Czujnik braku oleju	✓	




## Alternatora

Regulacja napięcia	AVR
--------------------	-----

## Dane wymiarowe

Długość	(L) mm	800
Szerokość	(W) mm	698
Wysokość	(H) mm	620
Waga (suchy)	kg	89
Wymiary kartonu DxSxW	mm	810x625x607

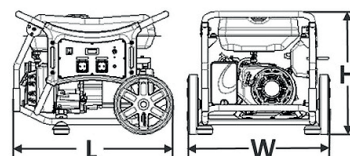

## Czas pracy

Pojemność zbiornika paliwa	26	
Zużycie paliwa @ 50%	l/h	2.17
Czas pracy przy 50%	h	12



## Poziom hałasu

Gwarantowany poziom hałasu (LWA)	dBA	97
----------------------------------	-----	----

## GENSET CONTROL PANELS

Mounted on the genset and complete of: instrumentation, control, protection of the generating set and sockets.

### COMMANDS

- Start selector switch with key: OFF - ON - START
- Selector switch for external control connector (AMF)
- Choke Lever

### INSTRUMENTATION

- Voltmeter
- Frequency meter
- Hourmeter
- Fuel gauge

### PROTECTIONS

- Thermal Magnetic protection
- Oil Guard

### OUTLET:

- CONNector for AMF

### GNIAZDA

SCHUKO 230V 16A IP44	2
2P+T CEE 230V 32A IP44	1



## ACCESSORIES CONTROL PANEL

### ATS - Automatic Transfer Switch

With the Powermate Automatic Transfer Switch, you can easily connect your generator to the power grid and continue to supply your domestic appliances in case of a power outage.

#### Equipment:

- Control unit
- Contactor with interblock
- Selector Switch: AUTO / MANUAL  
Manual option it is used to decouple the machine from the generator.  
The generator can start independently from the panel.
- Emergency Button: Stop the generator once pressed.
- Battery charged
- 5 meters control wiring (with connector)



#### Status indicators:

- Utility Power lamp: Detects the external grid.
- Generator lamp: The load switch to the generator the warning light turns on.
- Load lamp: ATS is powered by the load, it comes from the grid or from the generator.
- Battery lamp: It keeps charged the generator starter Battery, so it is always ready to go.
- Failure lamp: Indication of anomalies. The generator fails to start.

It is strongly recommended that your ATS need to be installed by a professional.

#### DIMENSIONS PANEL

Szerokość	(W) mm	410
Wysokość	(H) mm	310
Głębokość	(D) mm	180
Waga	kg	7

